


Royal Big Button Remote

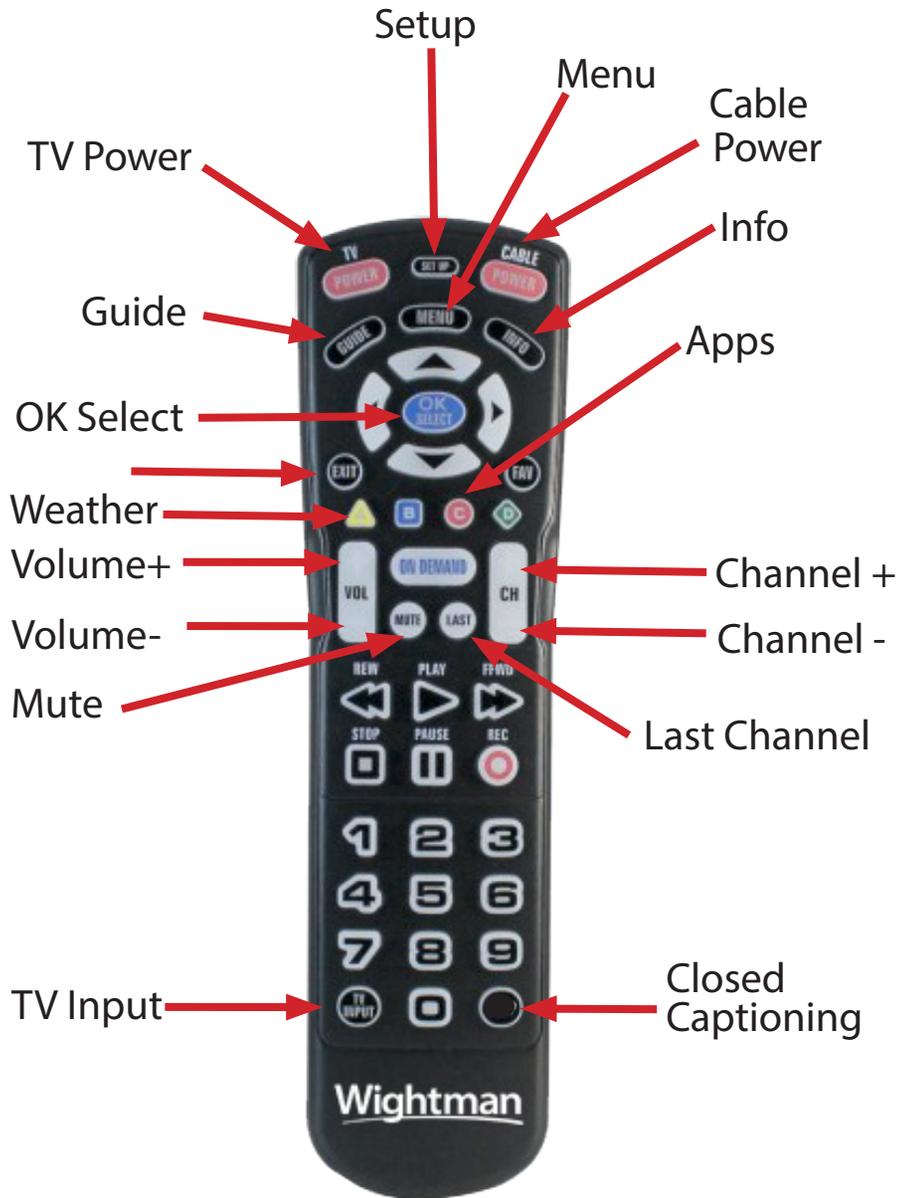

SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR TV

1. On your Wightman TV remote control, press and hold the **SETUP** button until it blinks twice.
2. Press the TV Power button.
3. Press and hold the **OK/SELECT** button.
4. Let go of the **OK/SELECT** button when the TV turns off.

SET UP YOUR WIGHTMAN TV REMOTE TO CONTROL YOUR SET - TOP BOX

- To set up the Amino 140 or 540 Set-Top Boxes, press and hold **SETUP** and the **Yellow A** button until the **CABLE POWER** button flashes twice.
- To setup Entone Kamai or Amulet Set-Top Boxes, press and hold **SETUP** and the **GREEN D** button until the **CABLE POWER** button flashes twice.

Royal Big Button Remote (Button Features)

TV - power TV off/on

SET-UP - only needed to Set-Up Remote with new TV

CBL - only needed to Set-Up Remote with new TV

MENU - opens the Main Menu / Options menu of different features with the Wightman TV service

GUIDE - Displays TV channels in a grid - lets you see the time slot/programs

OK - see current programming through display window, will also display the current time and temperature

EXIT - closes menus (like Guide, settings, info or on demand).

VOLUME -/+ - Volume up/down controls = controls loudness of the audio.

CHANNEL -/+ - Channel up/down controls - used to navigate through the channels on the TV service.

INFO - Displays detailed information on the current program or content you are watching. Also show local weather, what is playing next.

DAY -/+ - used with the TV Guide to quickly jump back/forth by full days in the on-screen program guide

PAGE -/+ - scroll through the channel guide one page at a time.

FAV - Quick access to Favourite Channel guide (needs to be setup by individual).

LAST - Previous channel you were on

Mute - Quickly silence the audio on the TV

TV Input - Used to switch between devices connected to your TV - if you are on the wrong INPUT the TV programming will not show on the TV

CLOSED CAPTION: CC button will show and remove Closed Captioning (subtitles).

LETTER KEYS:

A = Displays Weather - Click the Exit button to leave

B = Displays recent phone call(s) on the TV Call Display feature - if active

C - Apps: Weather, What's Hot.

D - (button not in use)